


BW20K  
20KW

---

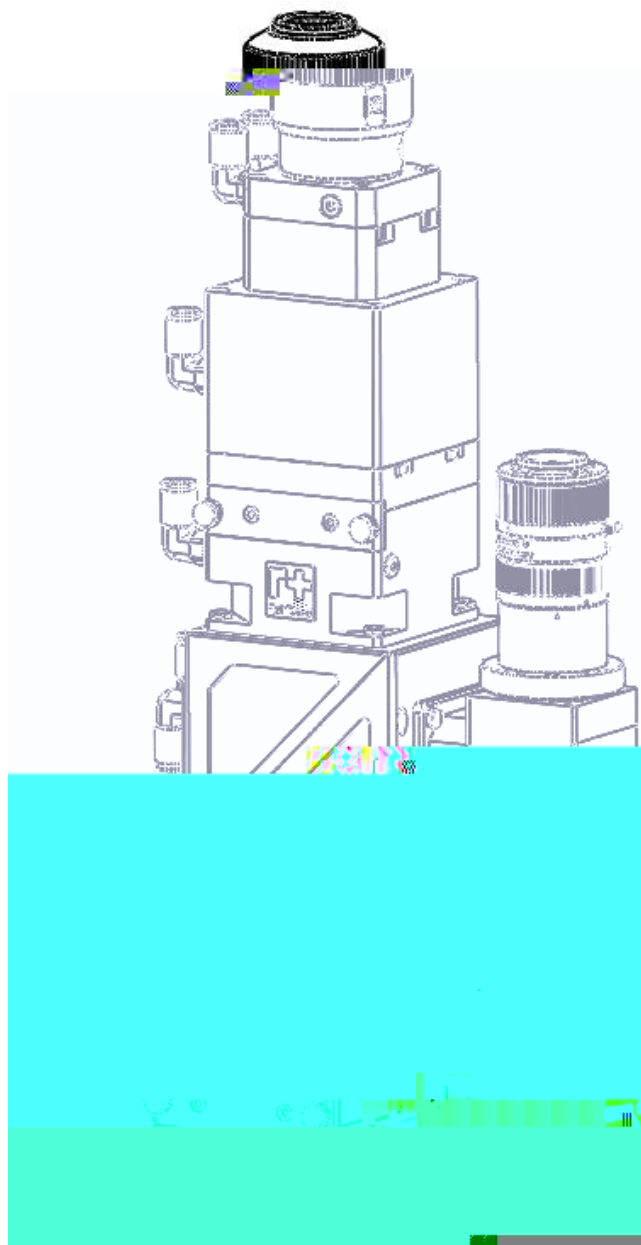

**Empower** 嘉强

Hotline: 400-670-1510

Email: [sales@empower.cn](mailto:sales@empower.cn)

Add: 上海市 松江区 东宝路 8 号

---

|    |              |       |
|----|--------------|-------|
|    |              |       |
| 01 | 2025. 08. 04 | V1. 0 |
|    |              |       |
|    |              |       |
|    |              |       |
|    |              |       |

BV20K

RAYTOOLS

BV20K

- 
- 
- 
- 
- 
-



1.

1.1

1.2

1.3

1.4

1.5

1.6

1.7

1.8

2.

2.1

2.2

2.3

2.4

2.5

2.6

2.7

2.8

3.

3.1

3.2


4.

4.1

4.2



1.2

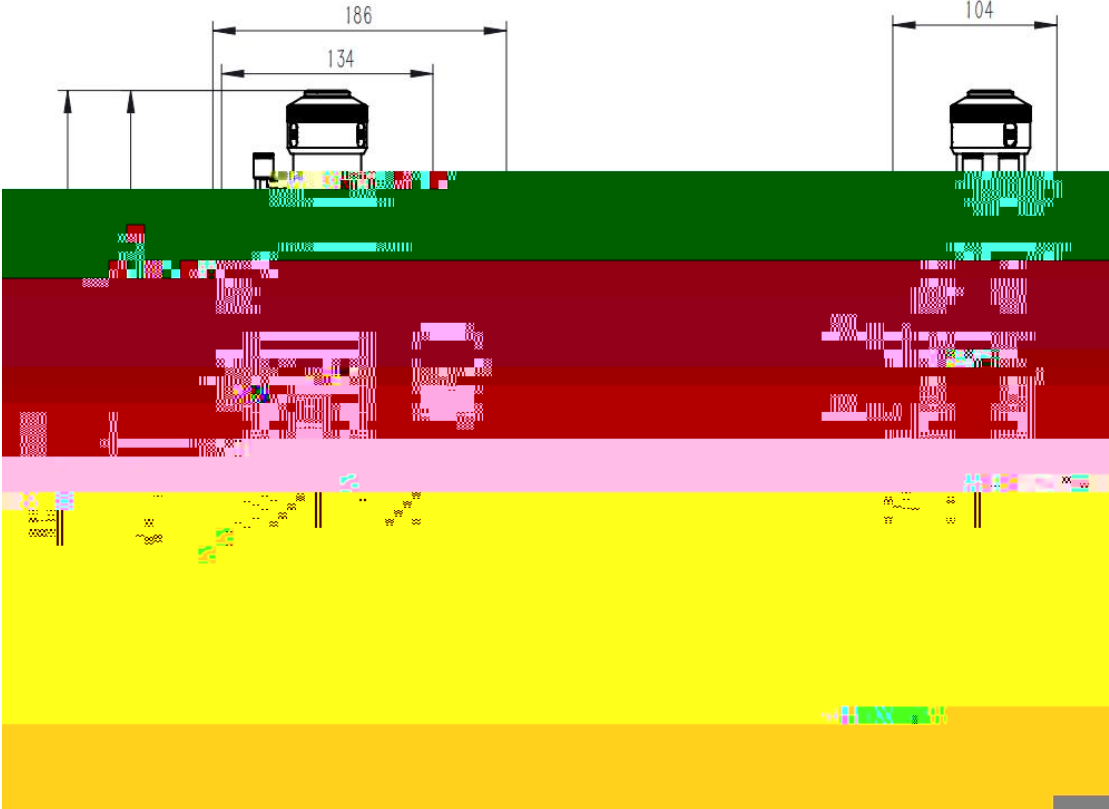


F150/ 0°

1.3

BV20K

1064nm

1. 4

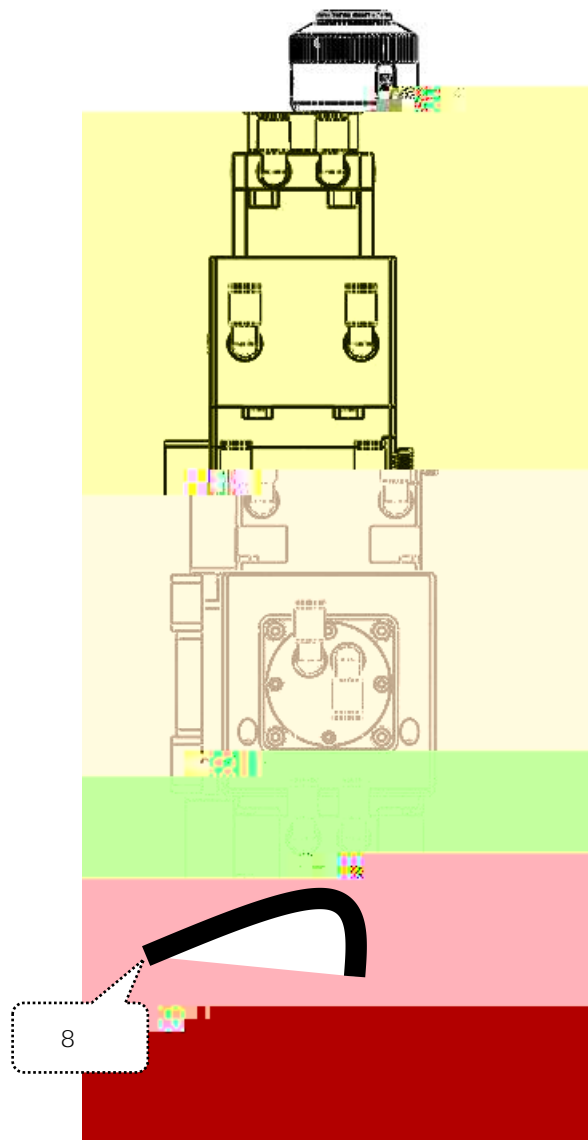


BV20K


0. 4- 0. 6MPa

8- 25L/mi n

1.5


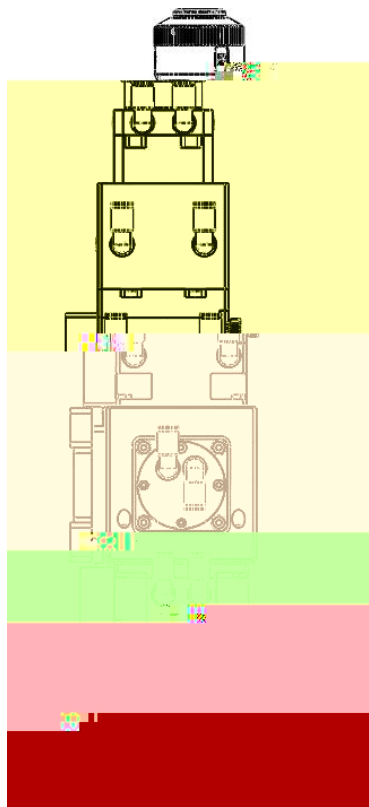


BV20K

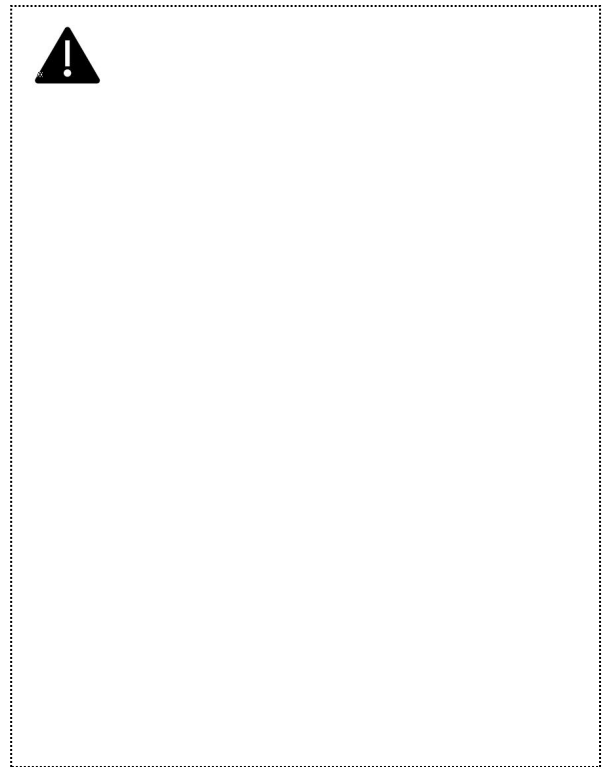


|   |  |                |                |
|---|--|----------------|----------------|
| 1 |  |                |                |
| 2 |  | 24-26<br>28-30 | 20-22<br>24-26 |
| 3 |  | 20             |                |
| 4 |  | 2-6            | bar            |
| 5 |  | 2-4            | L/mi n         |

1.6

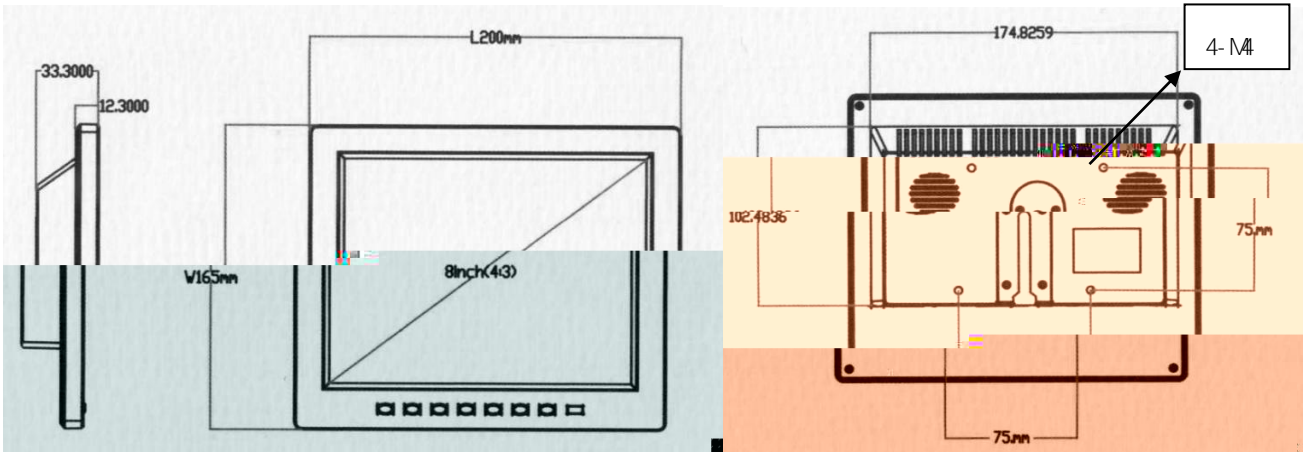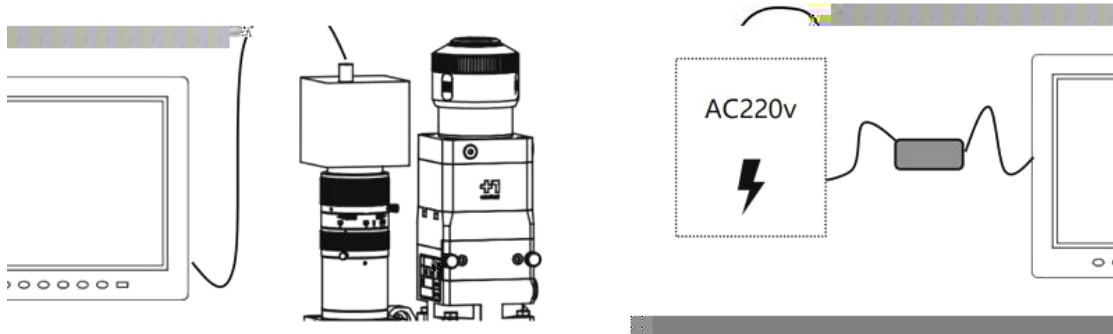

1.7

8

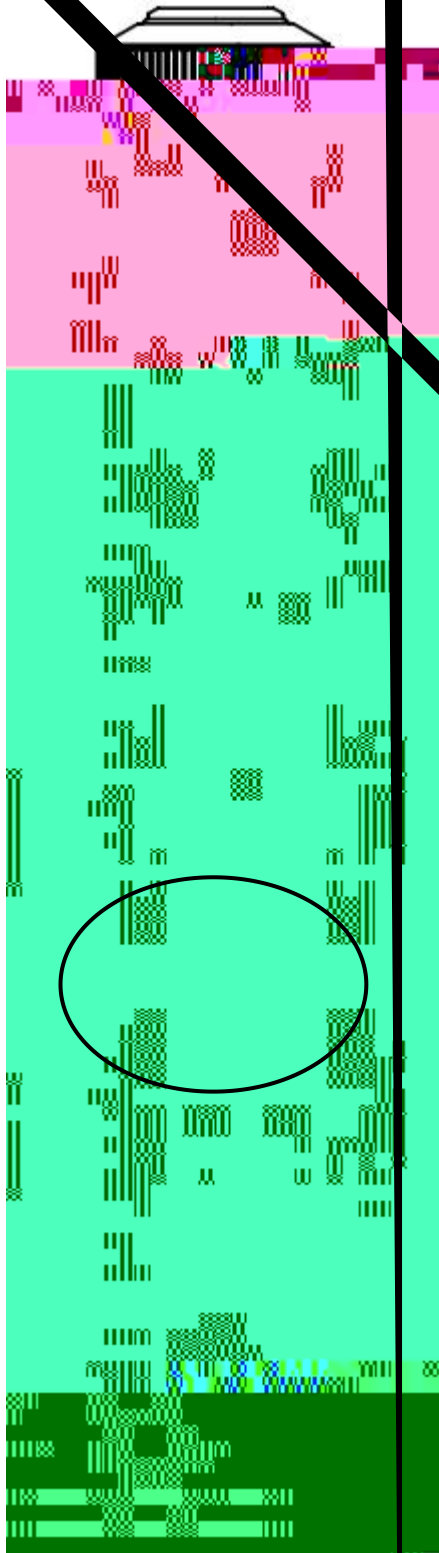

2.

2.1

10cm

30

洁净工作台类型：垂直净化；洁


净等级：ISO 5级、10级

高风速：0.3m/s




II


2.2

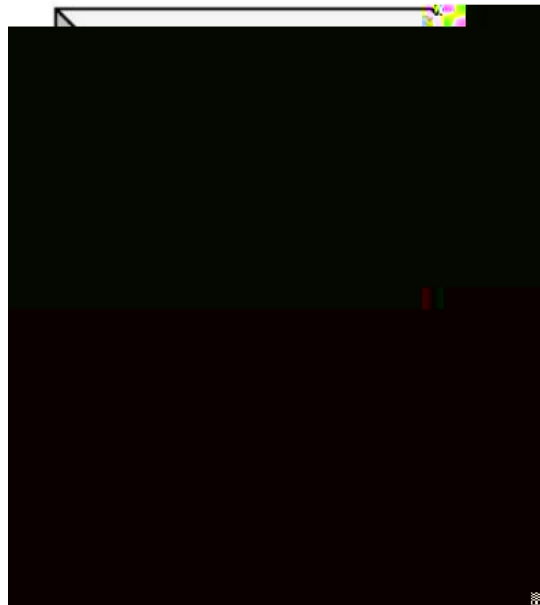


2.3

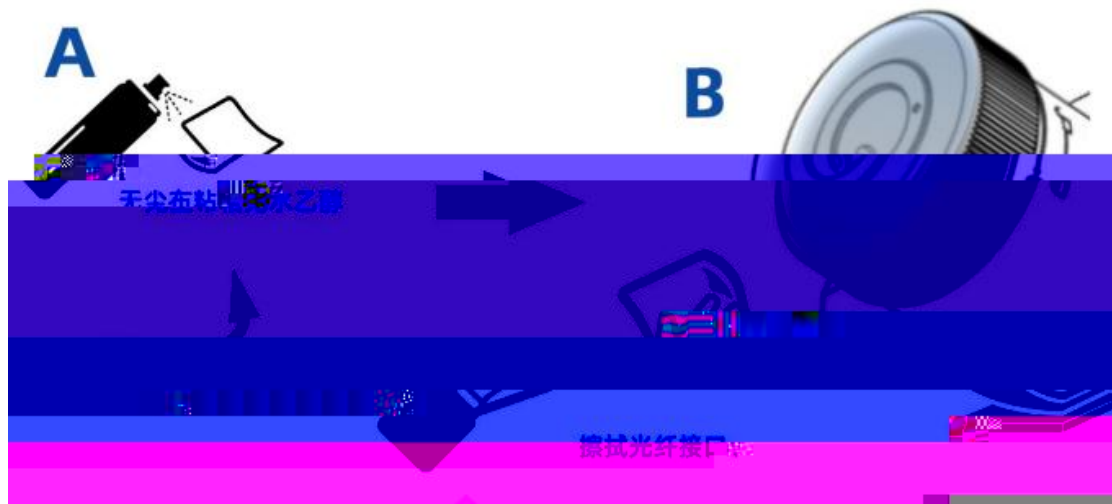

2.4

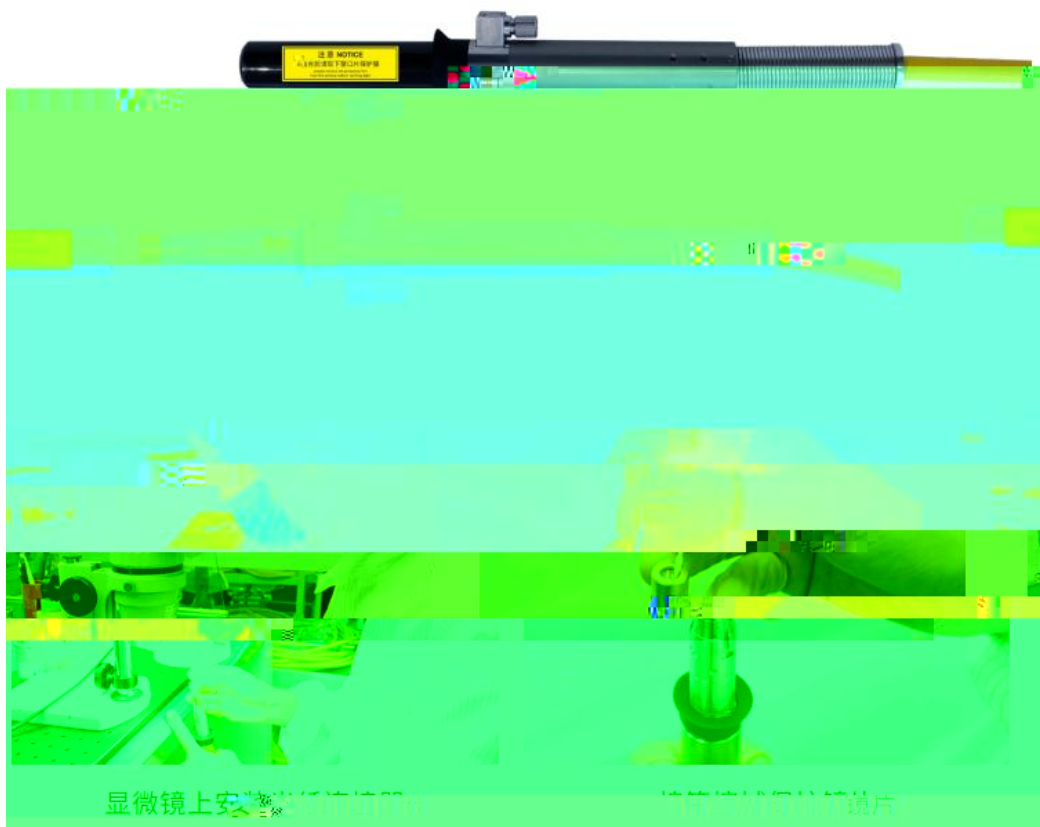

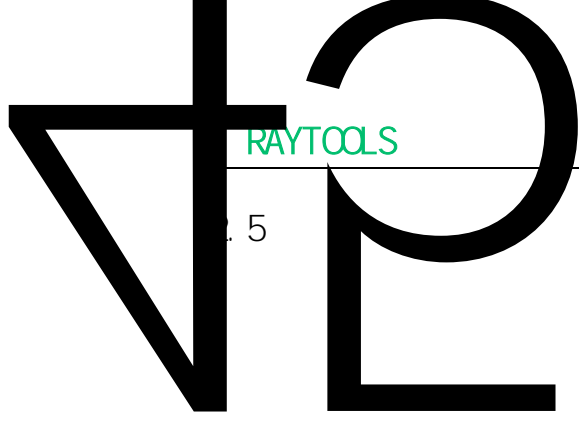


BV20K

RAYTOOLS


5

- 
- CBH 45°
- 45°
- CBH
- CBH



2.7

M6x20

/

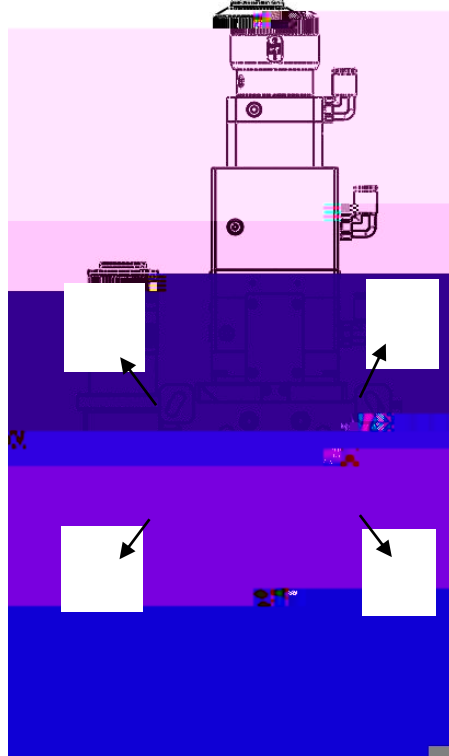


BV20K

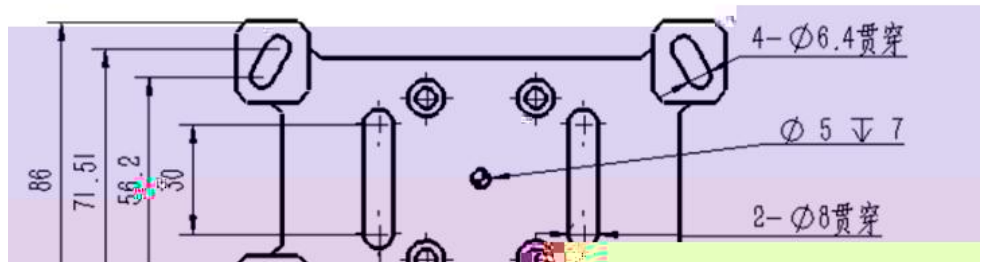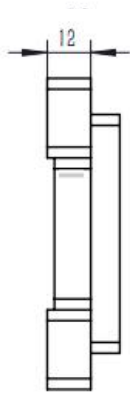



- 3.
- 3.1

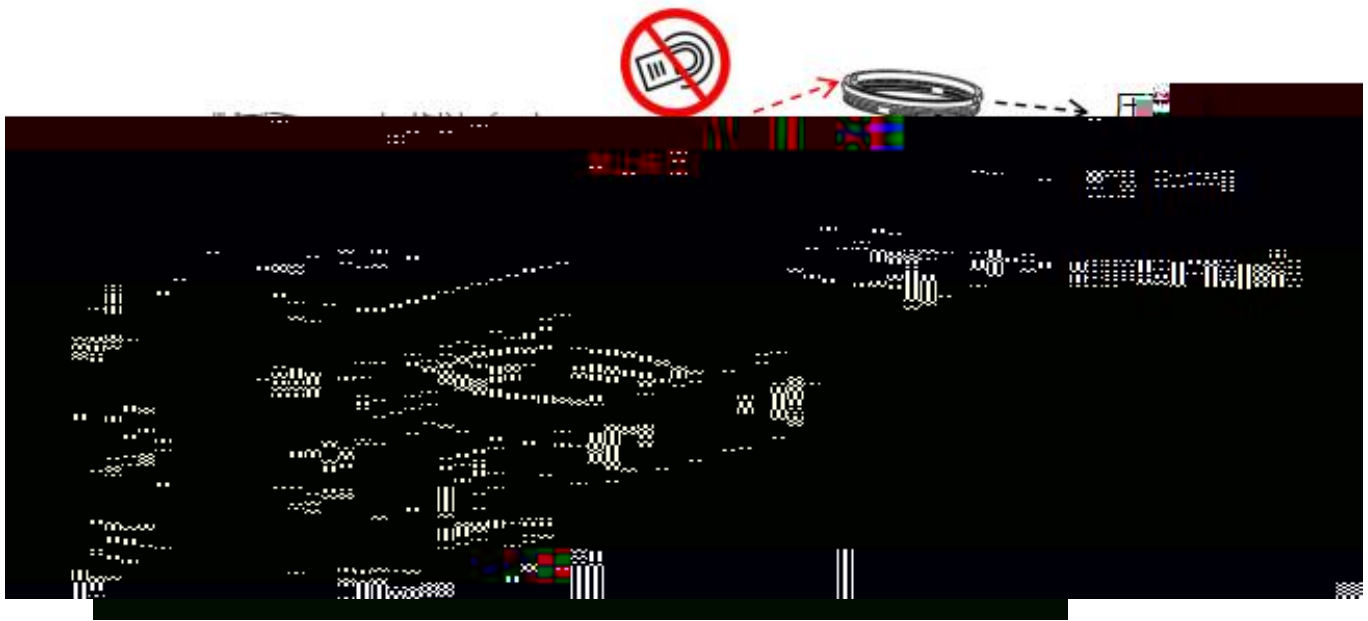

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.




3. 2



- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.



- 4.
- 4.1
- 1

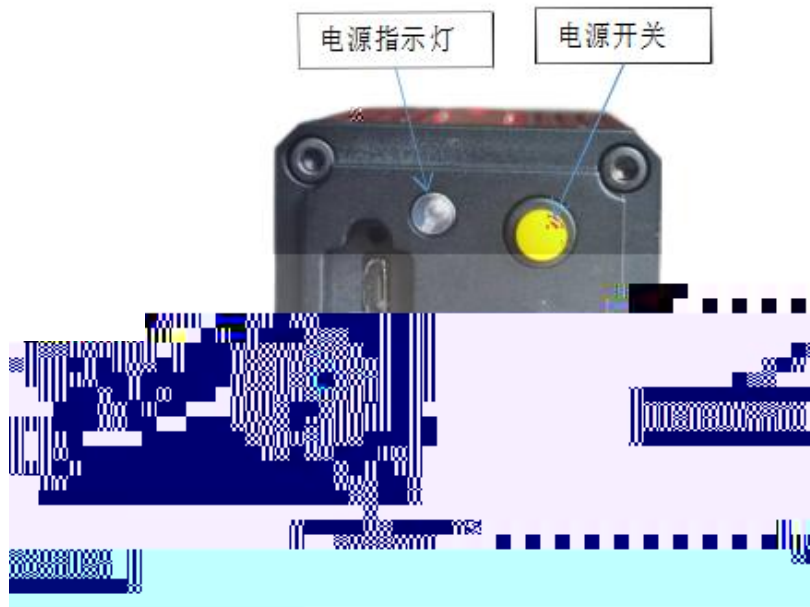


2


A sdk MecaVision Camera PlatformSetup(2.1.10.173). exe,





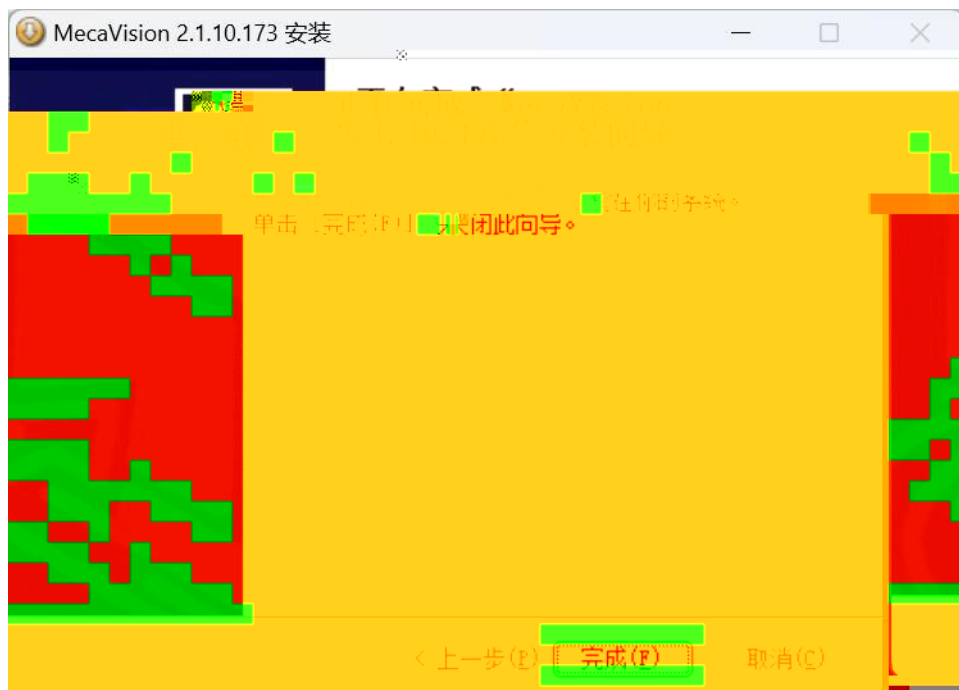

“ ”

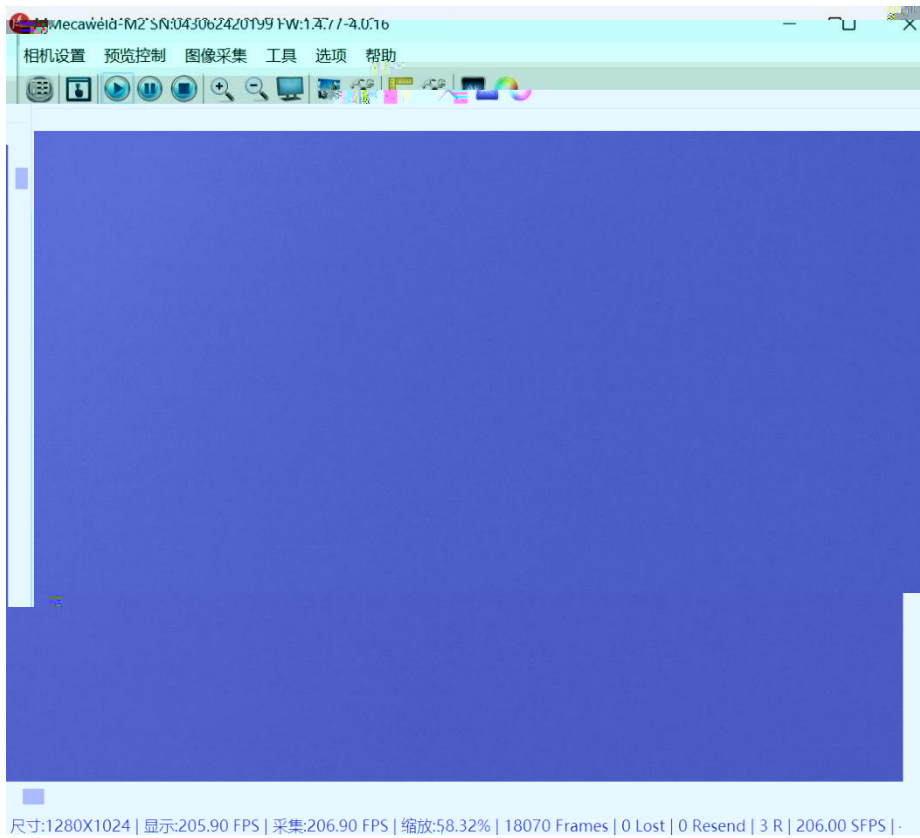


A 1/4 Logo 11

B USB USB3.0 USB3.0

C 12VDC

D

 " " " " " " " " " " " "



1/4 POE\$P


通常情况下，请按照相机的默认参数相机即可正常工作




M87

如果不小心调乱了参数导致相机不能正常工作，  
认设定参数！

" " " 10 "

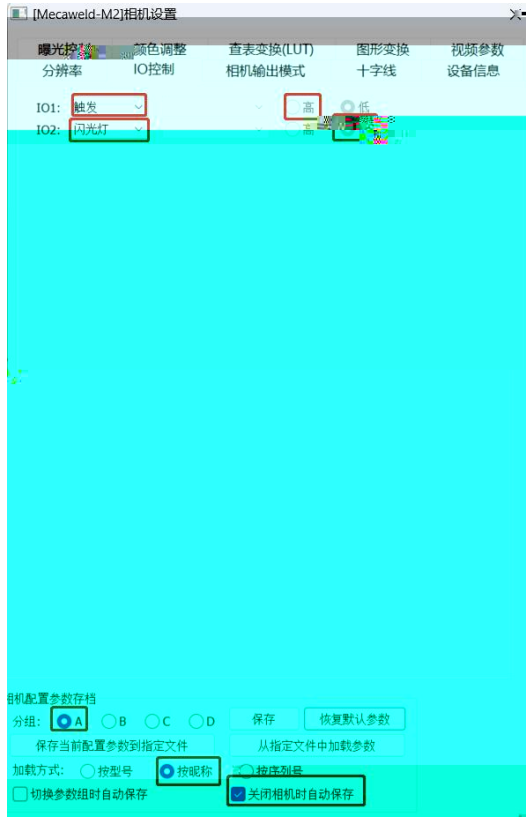

“ ”

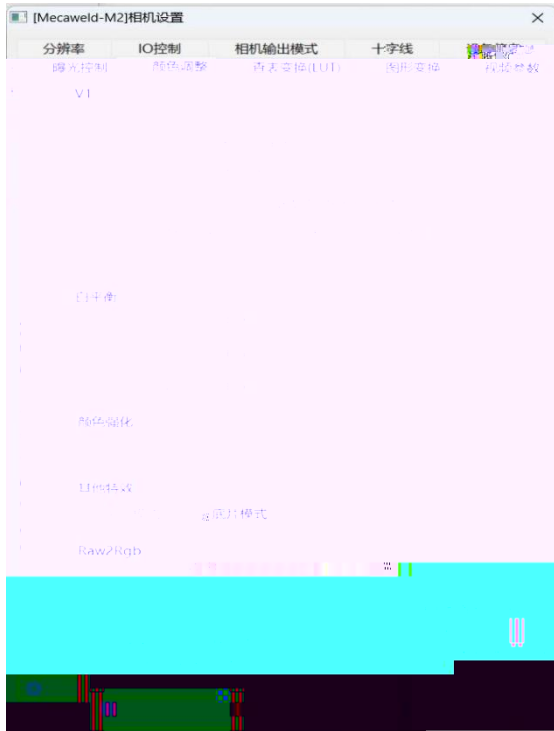




“ M&cavel d” logo

“ ” 180 °



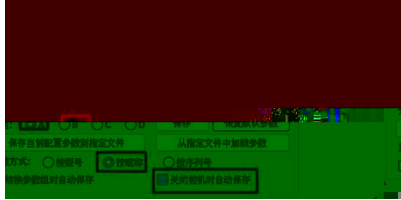

A,

"


"

"

" "





在此页面必须严格按照图中所示选择和设置参数，如果不按所示正确设置参数，数相机将不能正常工作！

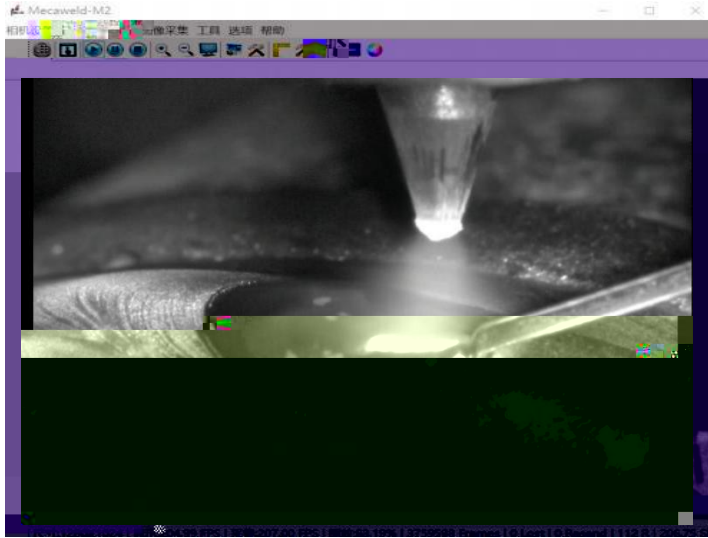





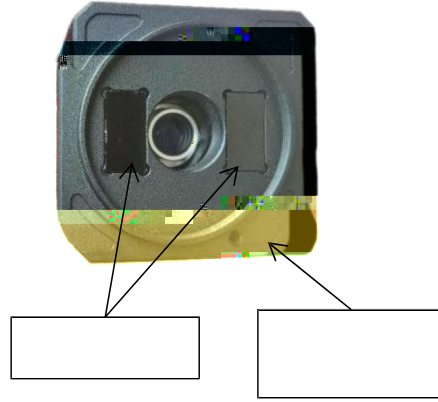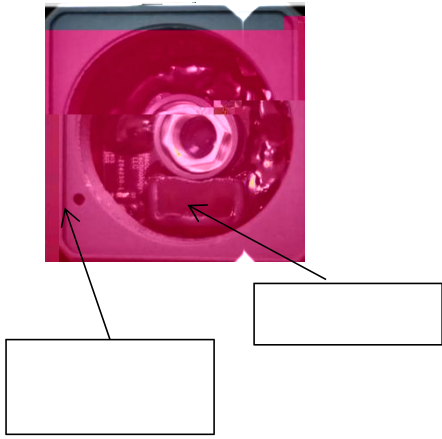

USB


12VDC

DC12V

USB

USB

4. 2

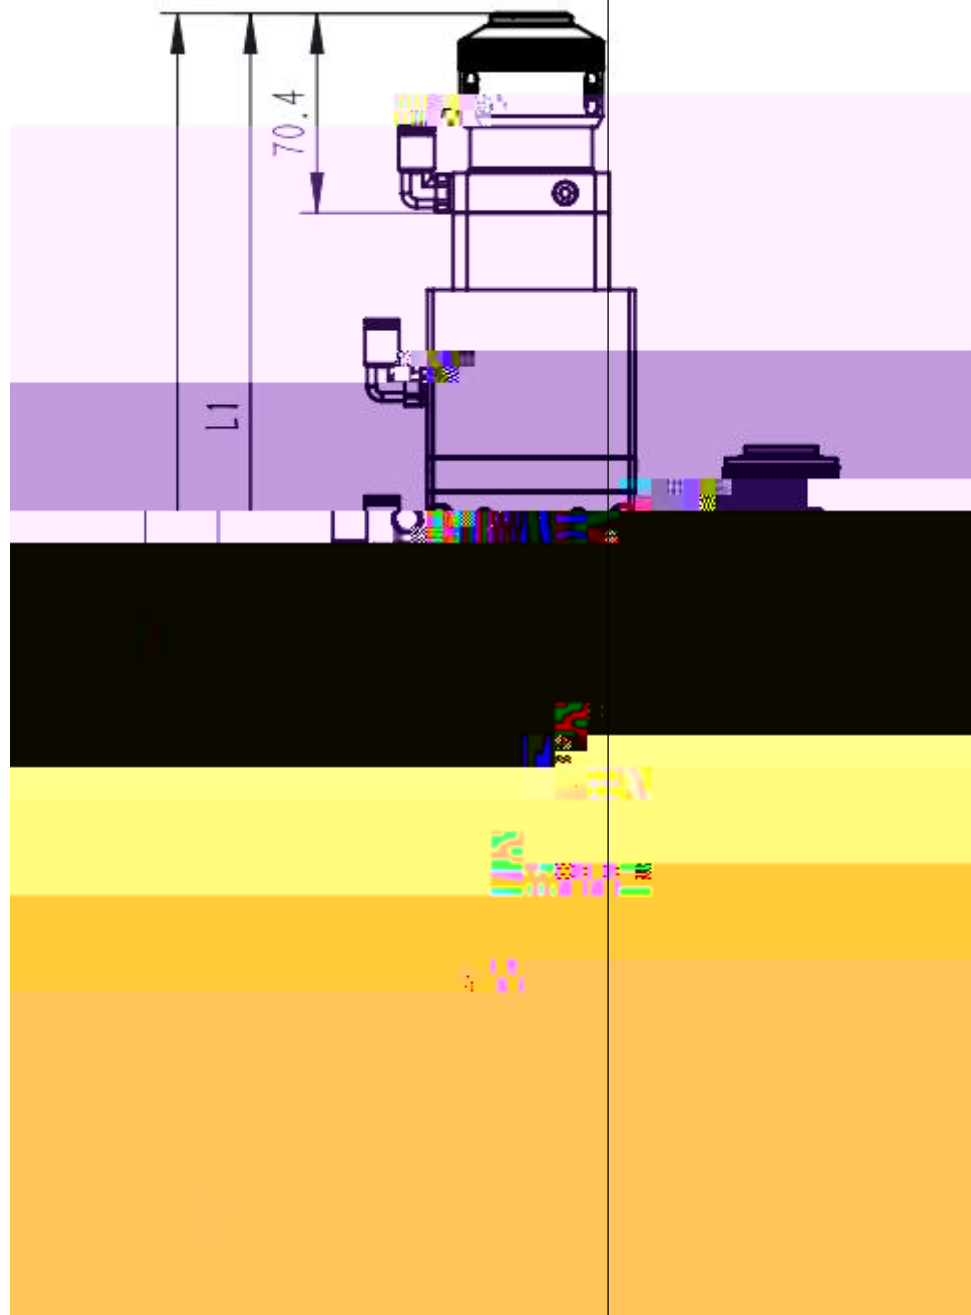

QBH , 0°

|      | L1(mm) | L2(mm) |
|------|--------|--------|
| F100 | 172.9  | 383.9  |
| F150 | 222.2  | 433.2  |



嘉强 (上海) 智能科技有限公司

地址: 上海浦东新区东陆路8号

电话: 400-670-1510

邮箱: sales@empower.cn

网址: www.empower.cn